

MANUAL USUARIO

PORTARROLLO DE COCINA







Índice





Español	5
Português	9
English	13


MANUAL USUARIO

PORTARROLLO DE COCINA



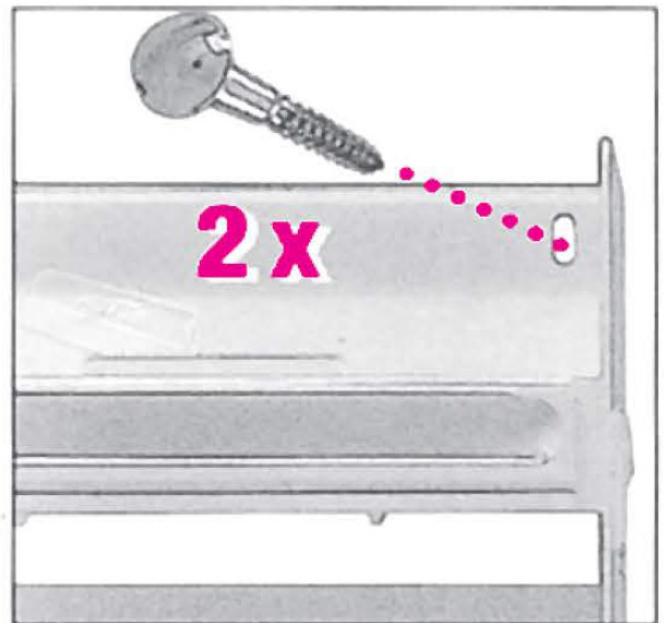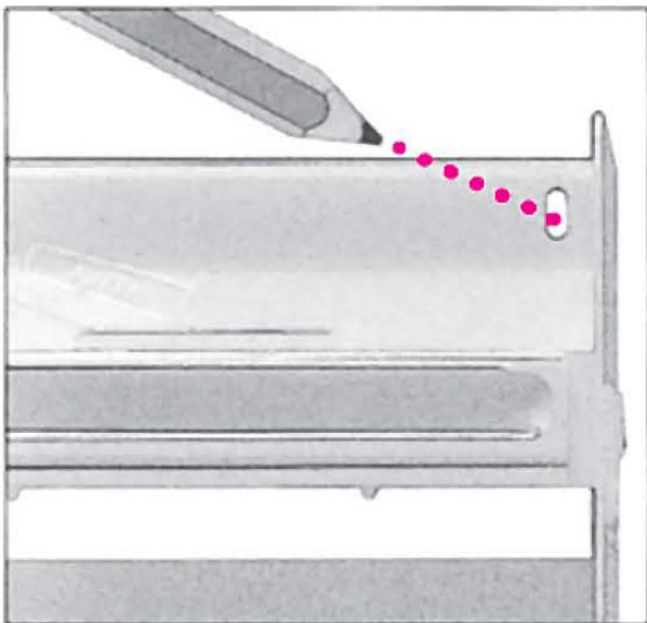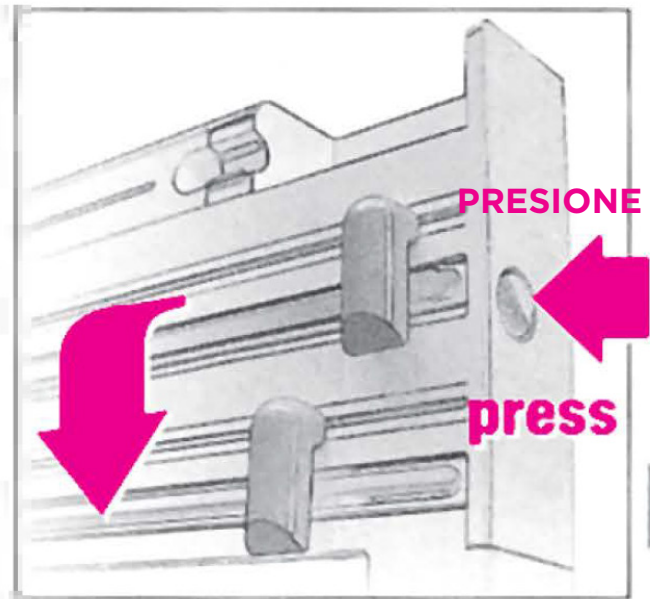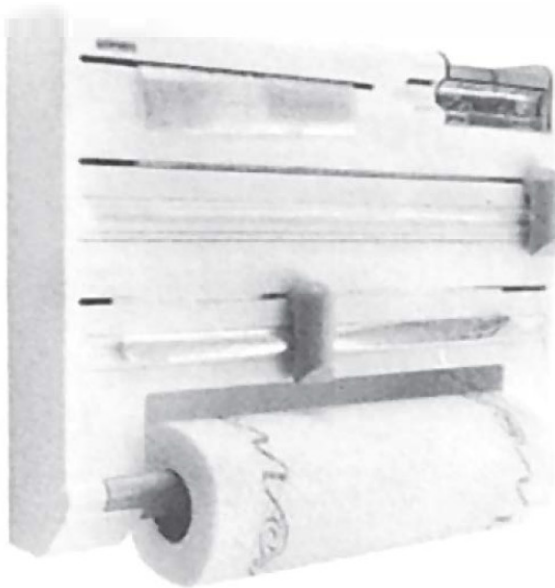

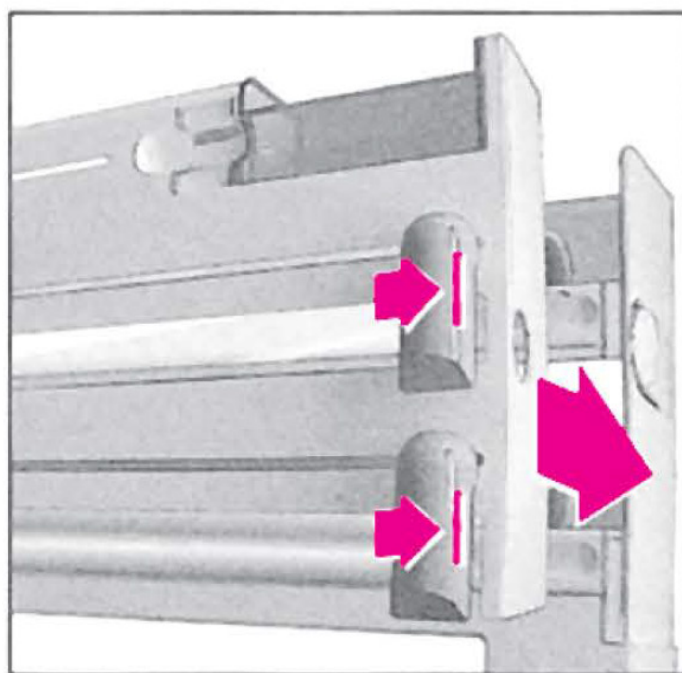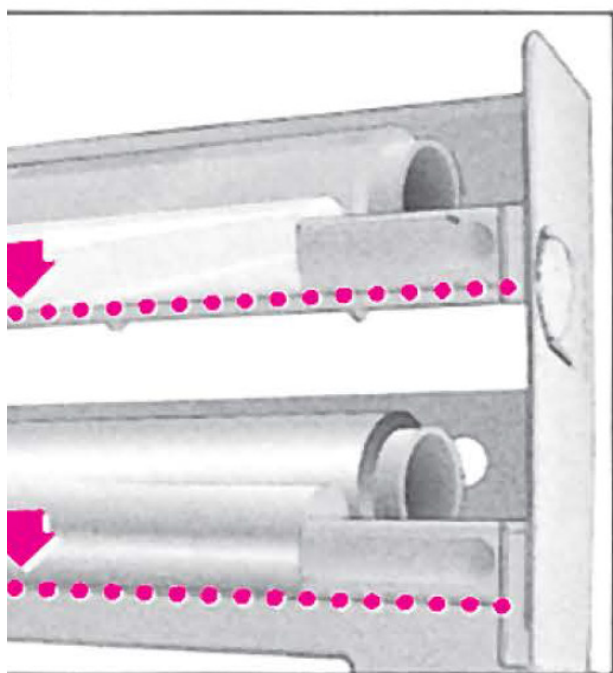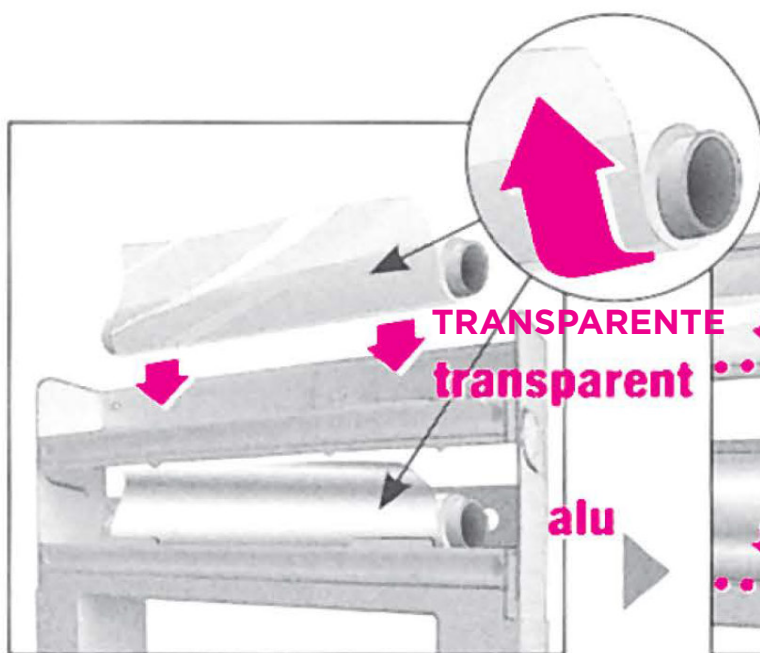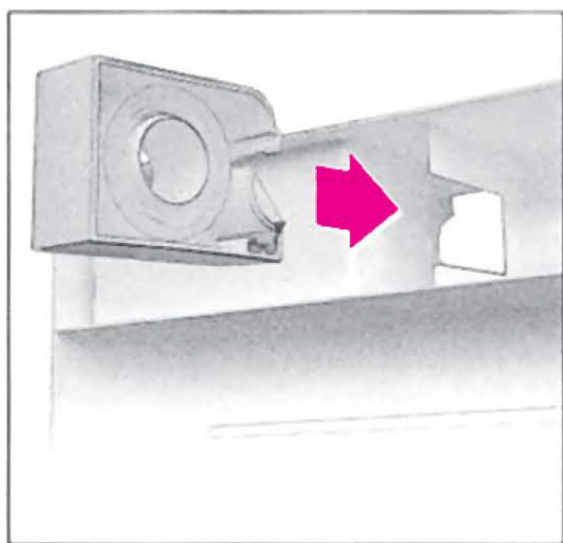

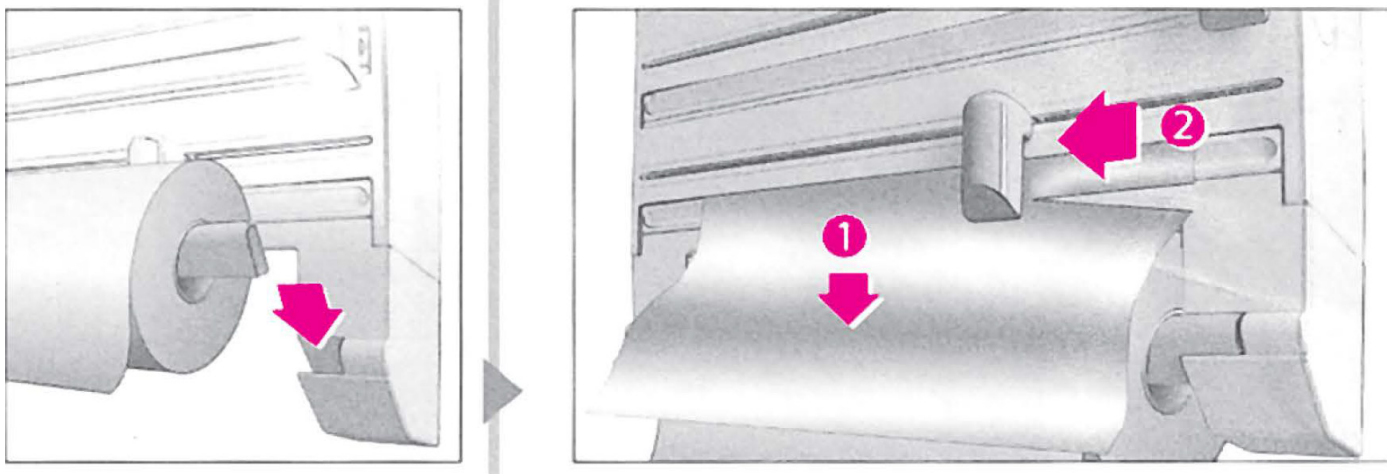

Para sacar la cubierta, presione el botón de bloqueo lateral. Monte la parte posterior con los tornillos adjuntos.

Para retirar la tapa, presione los botones de bloqueo laterales. Monte el soporte de pared con los parafusos provistos.



Presione los botones de bloqueo laterales para retirar la cubierta. Instale el soporte de pared con los tornillos incluidos.








MANUAL DO UTILIZADOR

SUORTE PARA ROLOS DE COZINHA



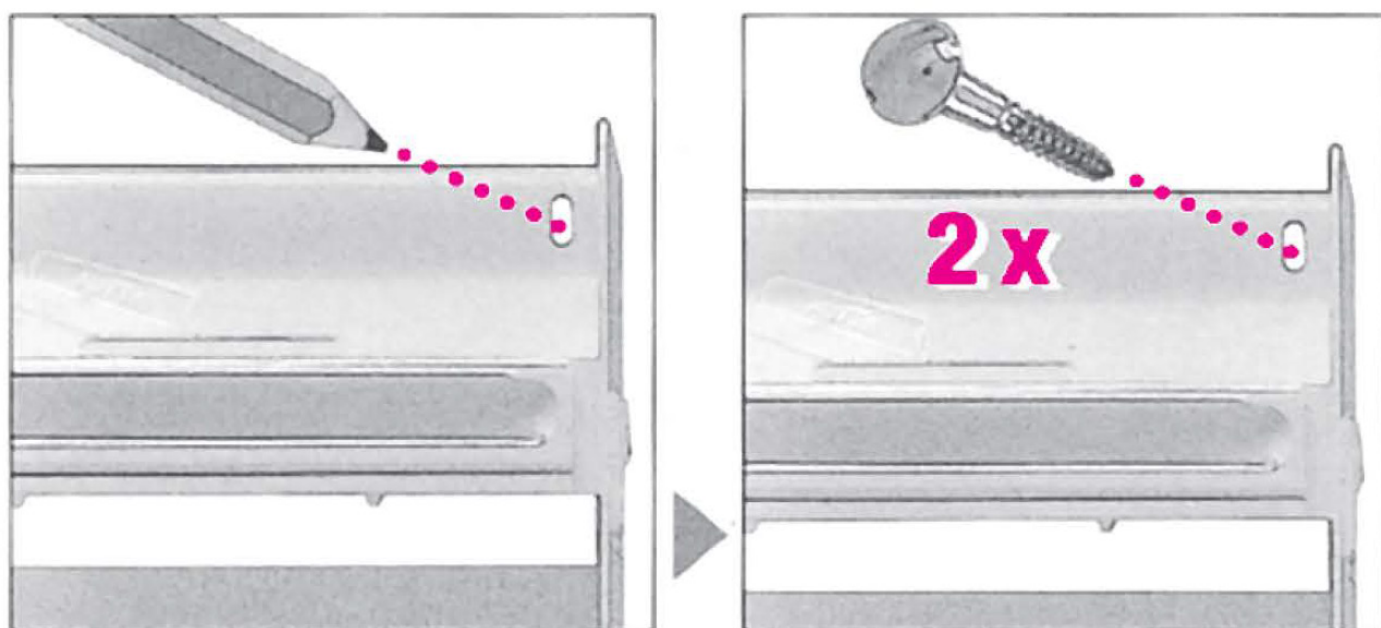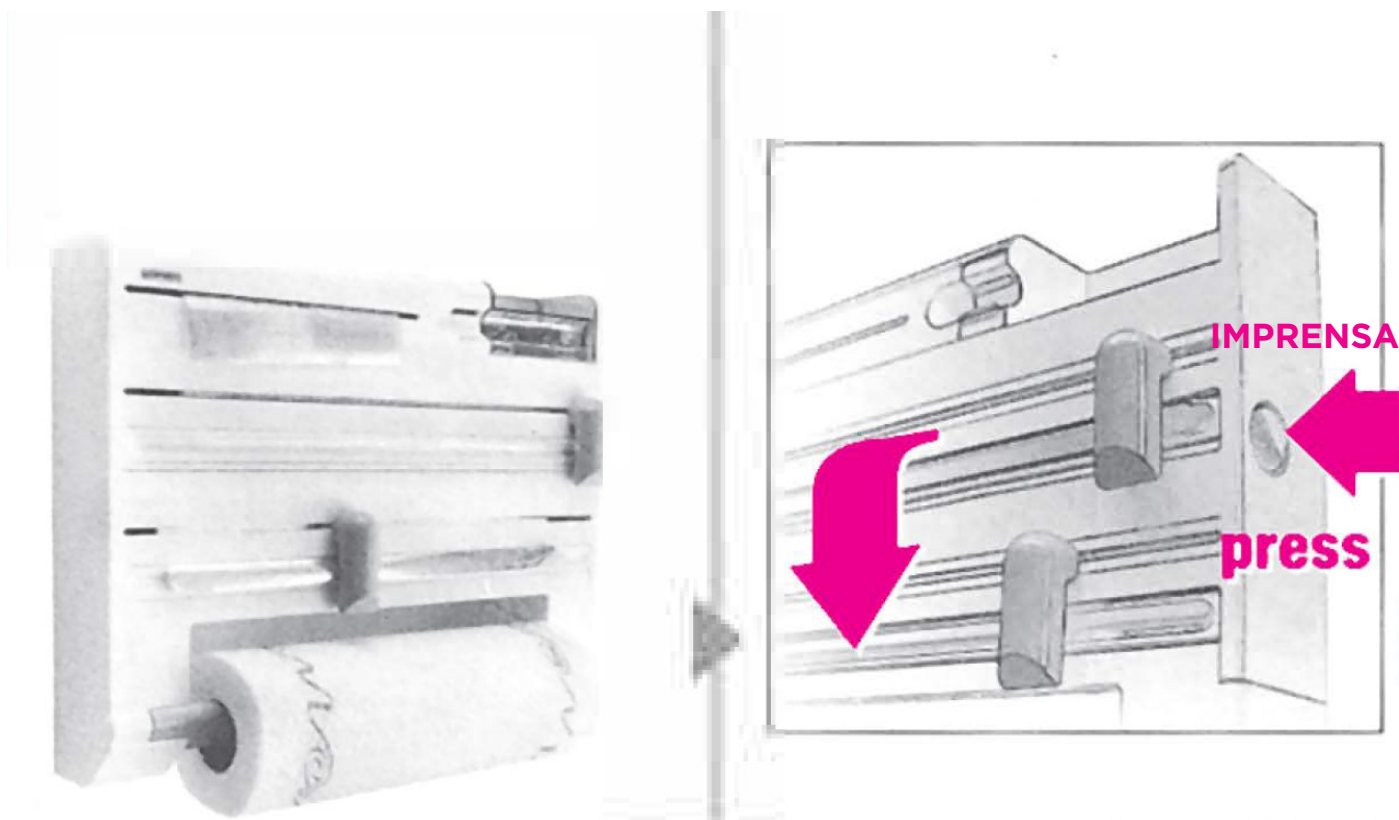

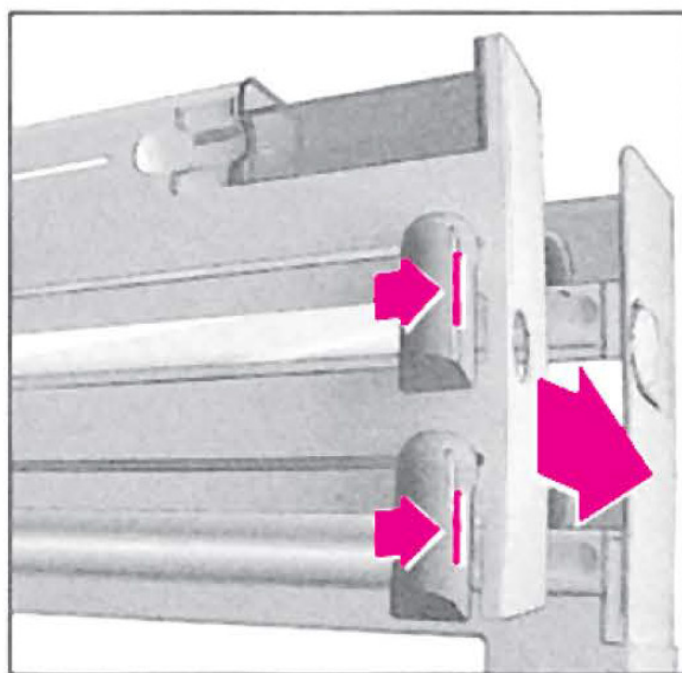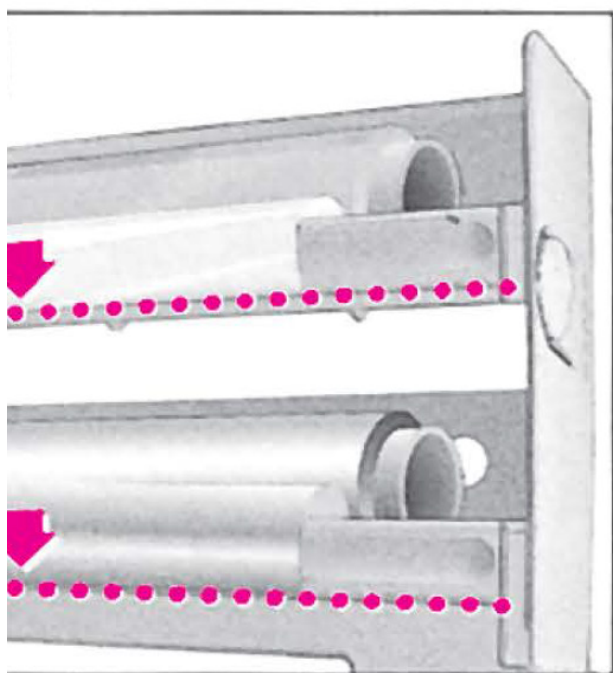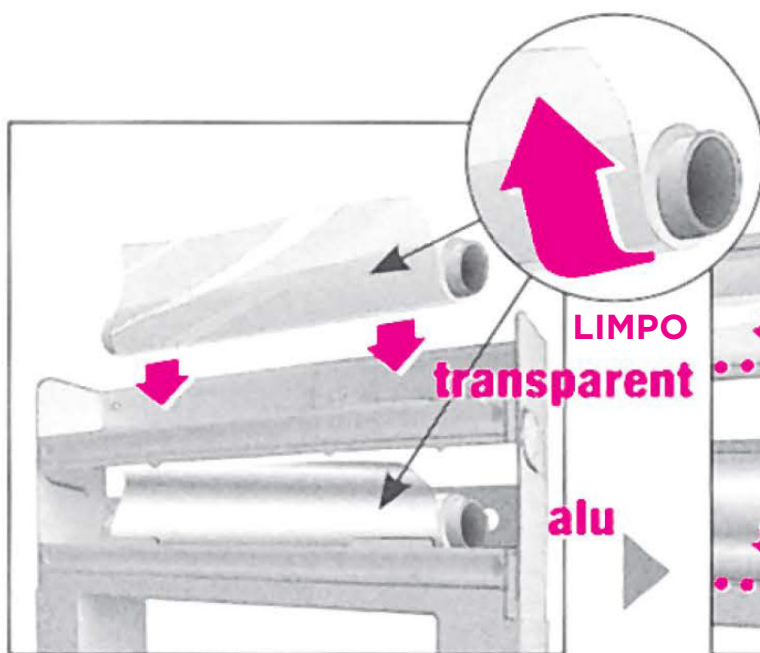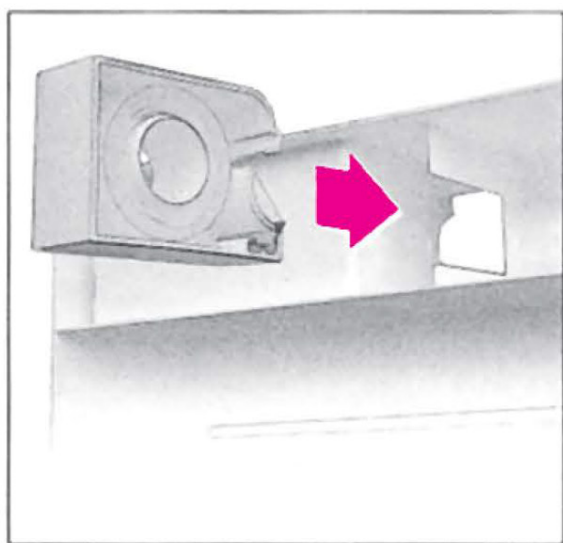

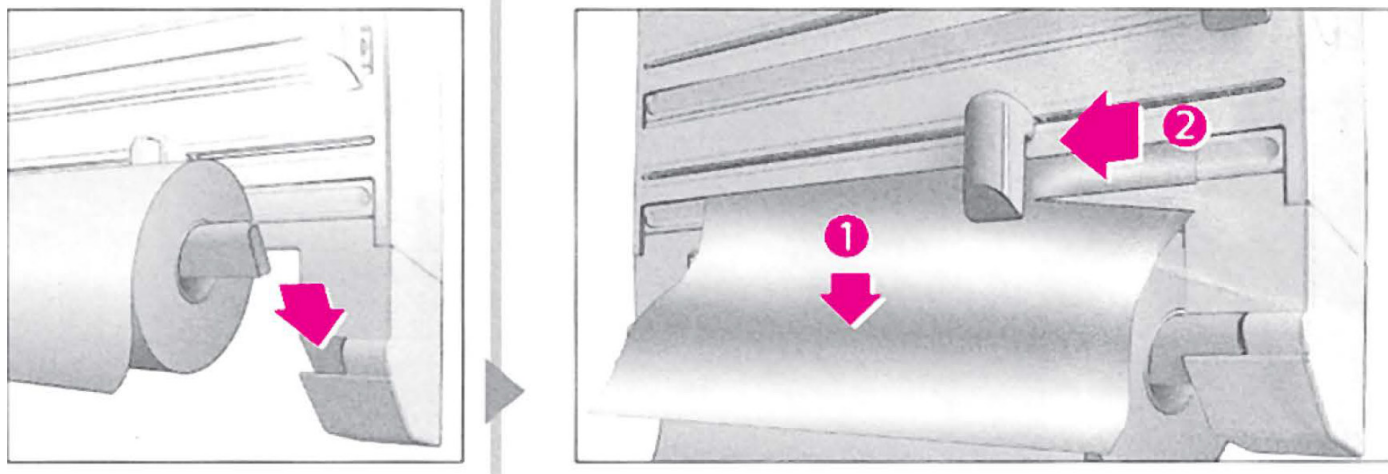

Para retirar a tampa, prima o botão de bloqueio lateral. Monte a parte traseira com os parafusos fornecidos.

Para retirar a tampa, prima os botões de bloqueio laterais. Monte o suporte de parede com os fusíveis fornecidos.



Prima os botões de bloqueio laterais para retirar a tampa. Instale o suporte de parede com os parafusos fornecidos.









USER MANUAL

KITCHEN ROLL HOLDER



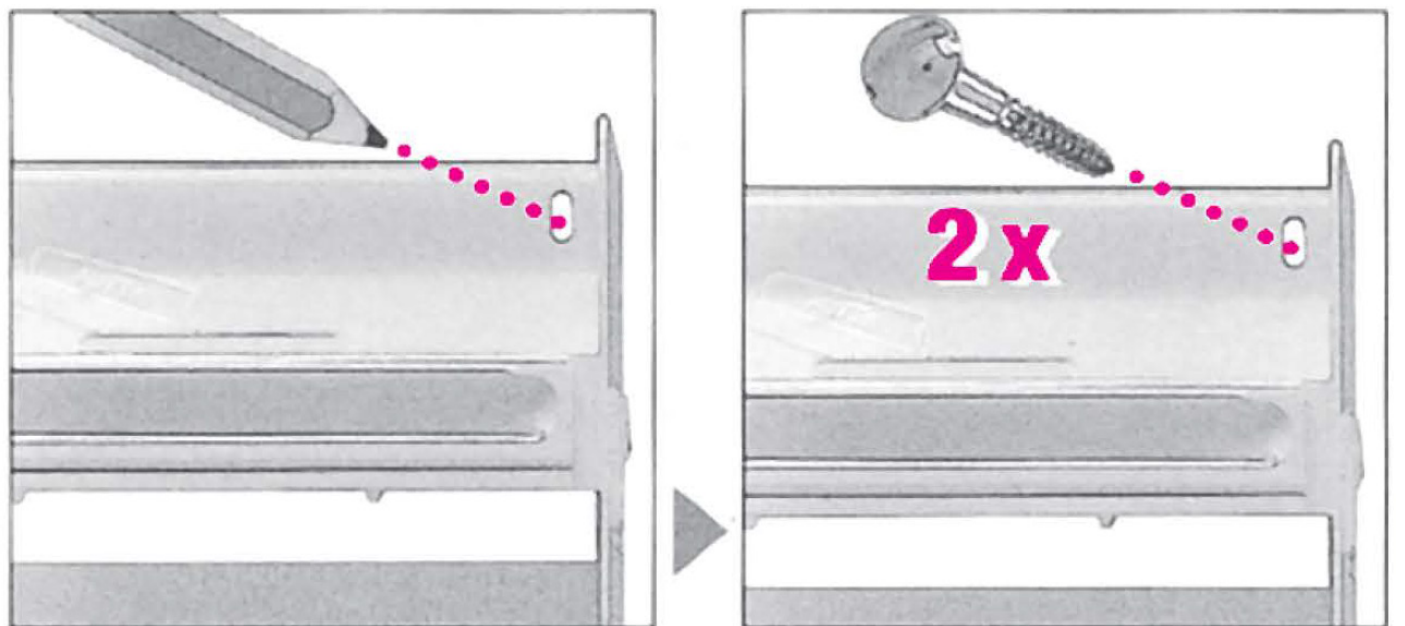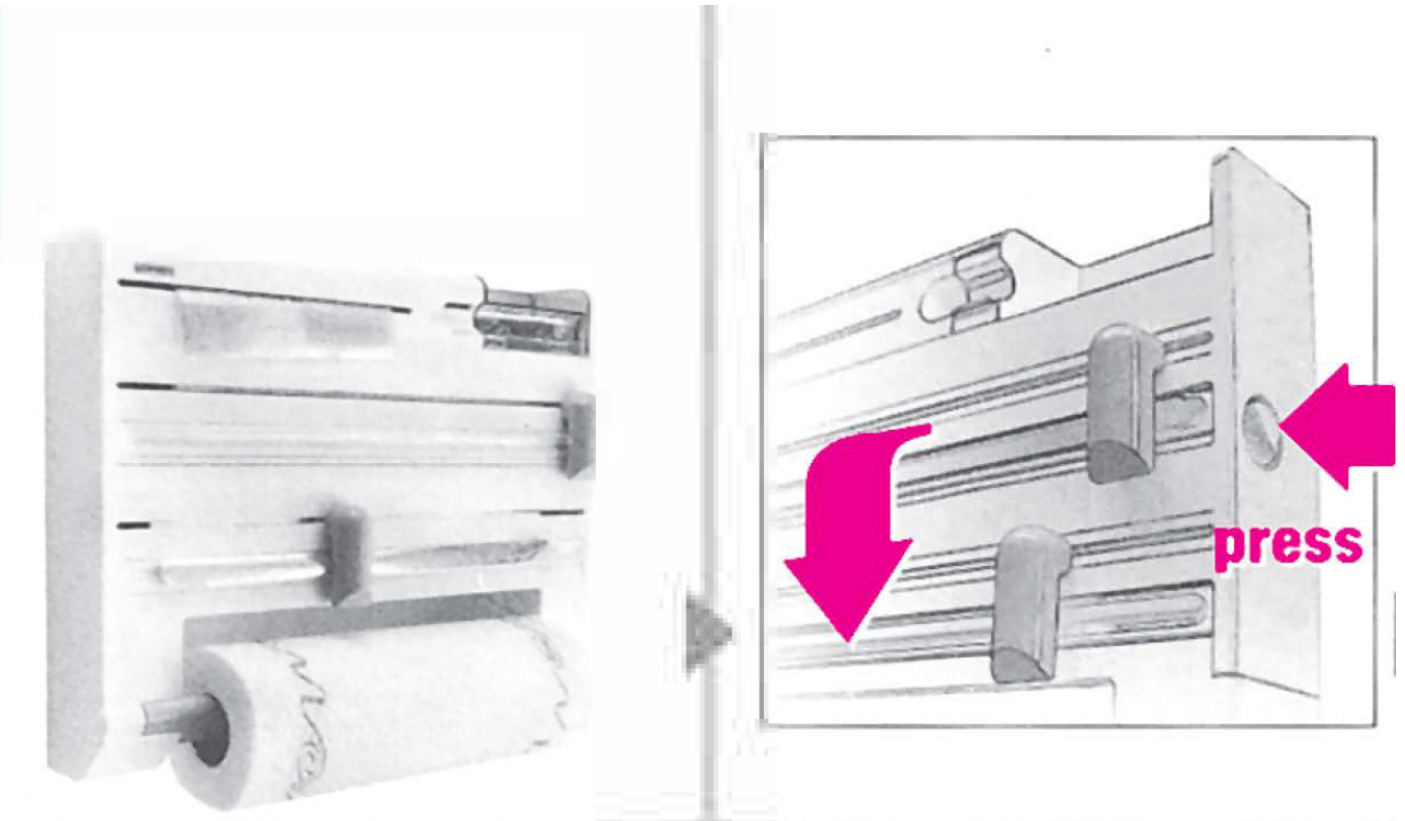

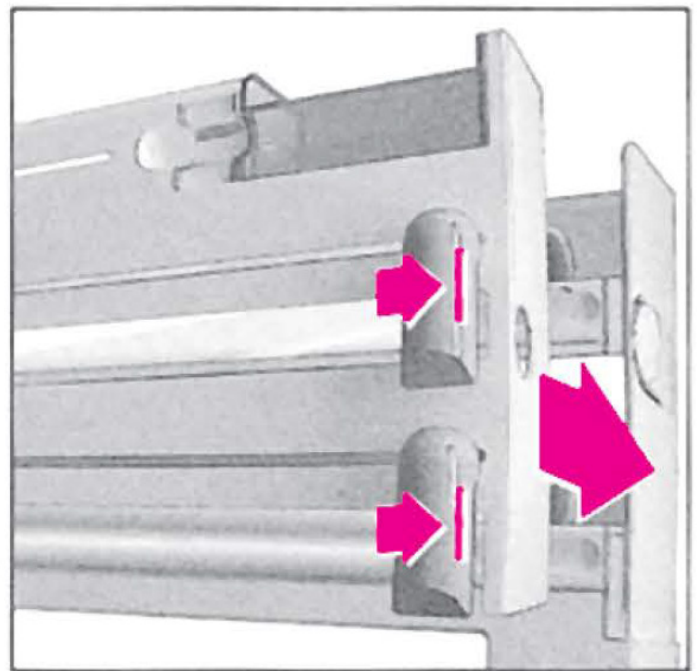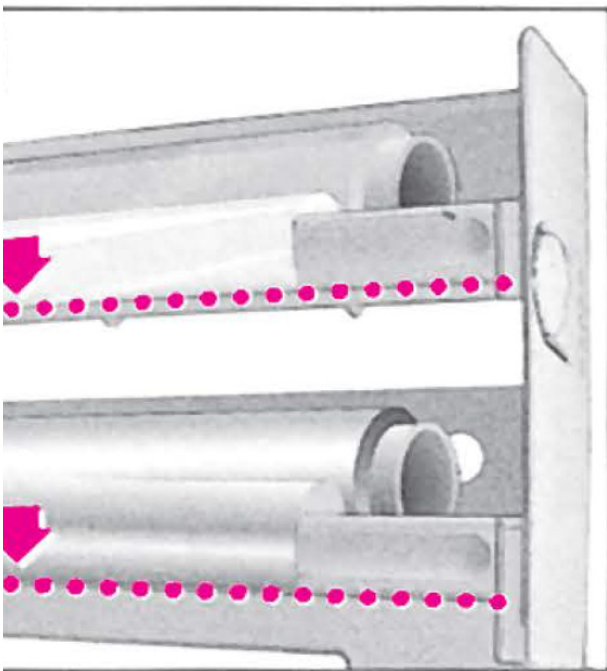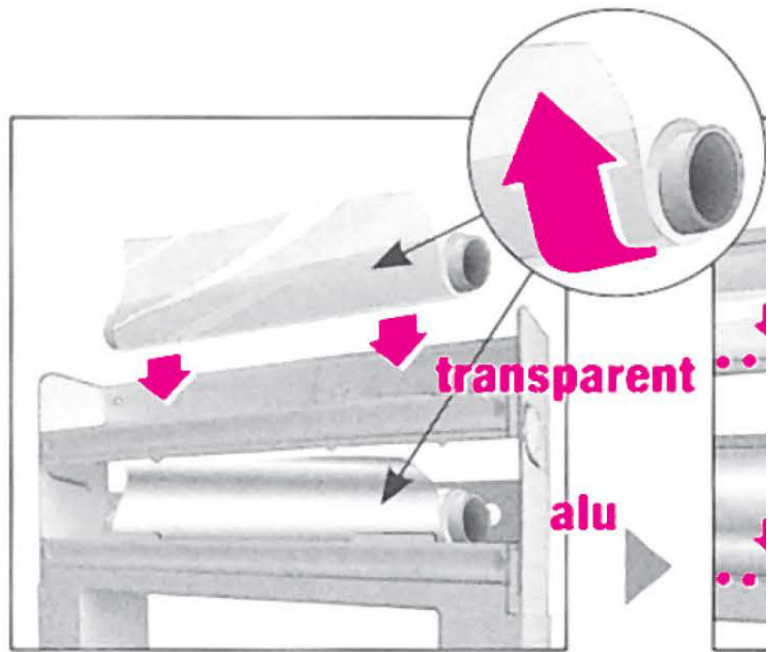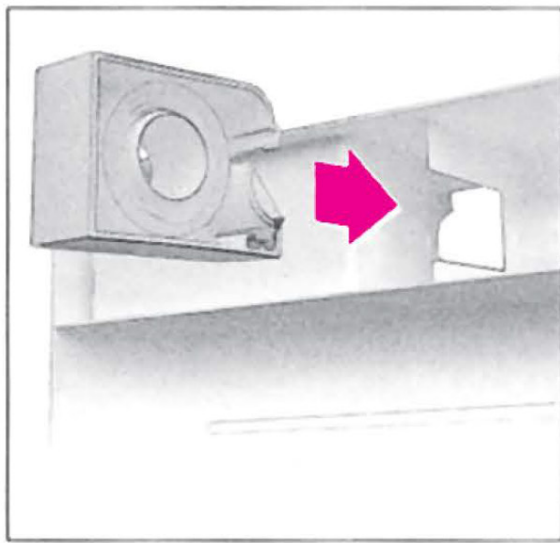

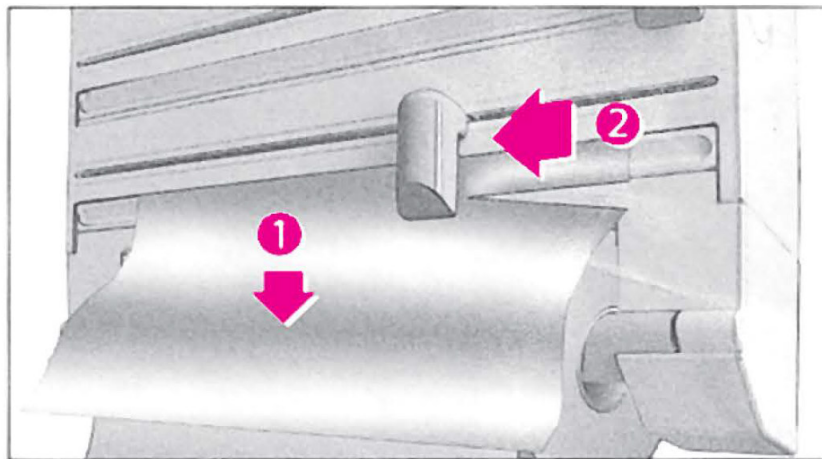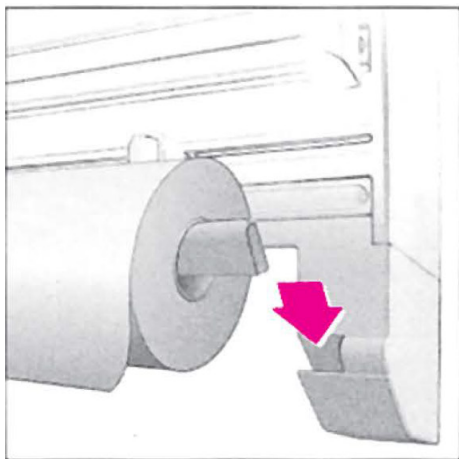

To remove the cover, press the side locking button. Mount the rear part with the enclosed screws.

To remove the cover, press the side locking buttons. Mount the wall bracket with the supplied fuses.

Press the side locking buttons to remove the cover. Install the wall bracket with the enclosed screws.

