 


INSTRUCTION MANUAL

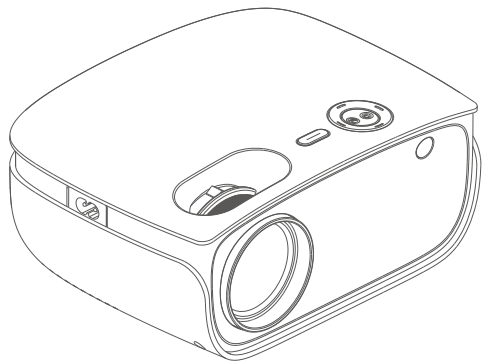

Note: As the product system is updated from time to time, the specific operation content is based on the actual situation.

 
●Important Safeguards

1. Please read the manual carefully before operating projector. To ensure stable power supply, please use standard power cable.
2. Please use the power supply and cable indicated on the rating label. The projector should be kept away from cloths, sofas and anything that may block the ventilation scoop. Please keep the unit away from flammable and explosive materials.
3. Please do not disassemble the unit yourself as this will invalidate the warranty service. To protect your eyes, do not stare directly at the lens when the projector is on. The projector must be kept away from water and any other liquids.
4. To prevent electric shock, please keep the projector out of the rain and away from moisture. It is recommended to switch off the projector after it has run for 6 hours non-stop. Please use the original foam and other cushioning materials when transporting the projector.
5. If the projector does not work, please contact the authorized service agent.


●Accessories List

- AV signal cable ×1
- Remote control ×1
- Power cable ×1
- User manual ×1

●Projector Overview

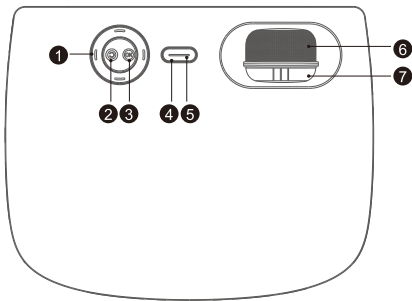

 - 1. Arrow keys
- 2. Return key
- 3. OK key
- 4. Power Button
- 5. Power Indicator:
Standby: red
Power on: blue

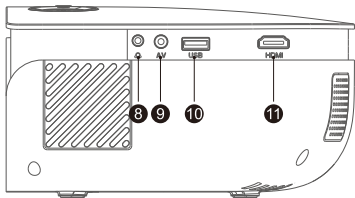


- 6. Focus
- 7. Keystone
- 8. Headphone port for audio output
- 9. AV port for normal signal input
- 10. USB port for multimedia play
- 11. HDMI port for HDMI signal input

●Specifiction


Model	LCD projector	Image system	LCD
Lamp	LED	Native resolution	1280x720, support 1080P
Language	English, 25 languages	Input voltage	AC100V-240V
		Size	218×174×96mm
Aspect Ratio	16:9 / 4:3	Working temp	0~35°C
Weight	1 KG	Input port	HDMI / USB / AV
Operation mode	Manual / Remote control	Output port	Headphone

●Multimedia Supported Files


Image Format	JPG/PNG/BMP/JPEG
Video Format	MP4/MKV/MOV/WMV/RMVB/RM/AVI/FLV/TRP/VOB/3GP/DIVX/TP/TS/MPG/M2TS/F4V/DAT
Audio Format	MP3/AAC/WAV/FLAC/WMA/M4A
File Format	TXT

 The projector does not support Dolby audio decoding.

 ●Remote Control

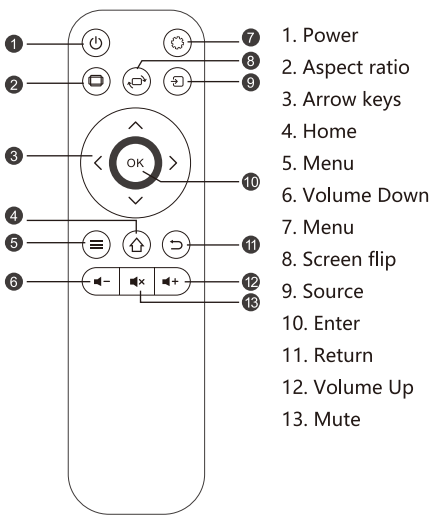

●Focus / Keystone Correction

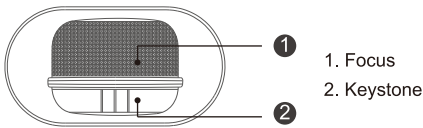 

I. Image focusing

Place the projector lens perpendicularly to the projection screen or curtain wall, and adjust the focus dial until the image is clear, that means the image focusing is finished. During the focusing process, you can play the programs or pick up the product menu images to match the focusing adjustment.

II. Keystone correction

Please turn the trapezoidal adjustment dial until the image is displayed normally.

Note: The projector has only mechanical trapezoidal correction in the vertical direction and there is no horizontal correction. Make sure the projector is level with the projected image.



●How to Set the Menu

 
Select Setting in the main interface, first press left/right keys to select sub-menu, second set up the mode you need, finally press OK key to confirm.

Submenu:

PICTURE: Picture Mode / Contrast / Brightness / Color / Tint / Sharpness / Focus / Color Temperature / Noise Reduction.

SOUND: Sound Mode / Treble / Bass.


OPTION: OSD Language / Aspect Ratio / Projection Mode / Factory Reset / Software Upgrade / Version.

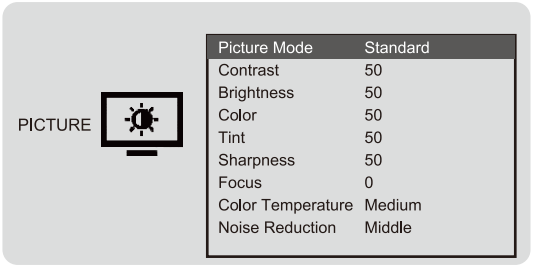

●How to Select Source

Step 1: Select the source you want in the main interface, such as HDMI and AV.

 Step 2: Press OK button on the remote control to enter corresponding source interface.

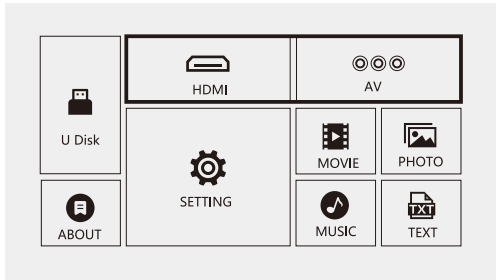


Note: When the projector is in the no signal interface, please press the source button on the remote control to select the home page or other source.

●How to Play Multimedia

Step 1: Connect USB to your projector.

 Step 2: Select the required file to play from main interface.

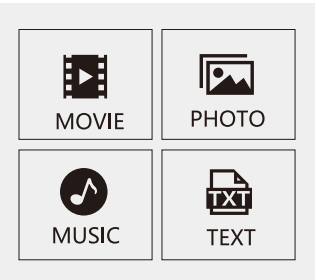

Note: U-disk should be inserted if require to select multimedia files.

●Standard Setting

Refer to the data in the table below to place the projector away from the projection screen according to the preset graphic size. When installing, place the projector on a solid, stable countertop or use a hanger to hoist it to the ceiling. The airframe should be well ventilated. Do not cover or block the vents. There should be no obstructions within 30cm of the vents.

Aspect ratio	16:9
Picture size (inch)	Projection distance (m)
50"	1.55
70"	2.17
100"	3.10
120"	3.72

Note: The above data is for reference only, please refer to the physical measurement.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.